





# Free Floating Lever Air/Gas Vents—All Stainless Steel

For Pressures to 600 psig (41 bar) or Specific Gravity Down to 0.50

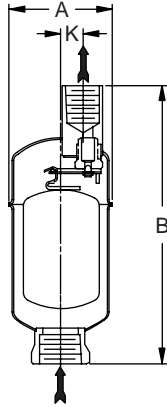

Model 11-AV

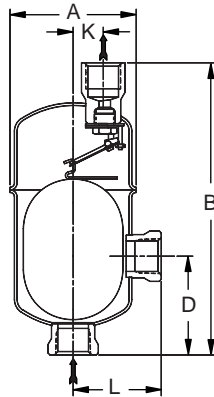

Model 22-AV and 13-AV



The Armstrong all-stainless steel guided lever air vents have been developed to provide positive venting of air/gases under pressure.

The body and cap and all working parts of the No. 11-AV, 22-AV and 13-AV are made of high strength, corrosion resistant stainless steel. Body and caps are welded together to form a permanently sealed, tamperproof unit with no gaskets. Elliptical floats and high leverage provide up to 115 SCFM capacity for these compact air/gas vents. Lever action is guided to assure proper seating of the valve under all operating conditions.

11-AV, 22-AV and 13-AV—All stainless steel construction where exposure to either internal or external corrosion is a problem. These air/gas vents have the same proven free floating mechanisms used in other Armstrong steam traps. Pressures to 600 psi @ 100°F (41 bar @ 38°C).

**For a fully detailed certified drawing, refer to list below:**  
**11-AV CD #1066**  
**13-AV and 22-AV CD #1086**

Physical Data						
Model No.	11-AV		22-AV		13-AV	
Pipe Connections	1/2, 3/4**	15, 20**	3/4	20	1	25
"A"	2-3/4	70	3-7/8	99	4-1/2	114
"B"	7-1/4	184	8-13/16	224	11-3/8	289
"D"	—	—	3-3/8	86	6-1/8	156
"K"	9/16	14	7/8	22	1-3/16	30
"L"	—	—	2-5/8	67	3-1/4	83
Weight, lb (kg)	1-3/4 (0.80)		5 (2.3)		7-1/2 (3.4)	
Max. Allow. Pressure (Vessel Design)	500 psig @ 100°F (34 bar @ 38°C) 440 psig @ 500°F (30 bar @ 260°C)		600 psig @ 100°F (41 bar @ 38°C) 475 psig @ 500°F (33 bar @ 260°C)		570 psig @ 100°F (39 bar @ 38°C) 490 psig @ 500°F (34 bar @ 260°C)	

\*\* 1/2" (15 mm) outlet.

List of Materials				
Model No.	Valve & Seat	Leverage System	Float	Body & Cap
11-AV	* 440 Stainless Steel	303/304 Stainless Steel	304 Stainless Steel	Sealed Stainless Steel 304-L
22-AV				
13-AV				

\*Type 316 SS valve and seat available. Consult factory.

All dimensions and weights are approximate. Use certified print for exact dimensions. Design and materials are subject to change without notice.

# Free Floating Lever Air/Gas Vents—All Stainless Steel

For Pressures to 600 psig (41 bar) or Specific Gravity Down to 0.50



Maximum Operating Pressures of free floating lever vents with weighted floats for different orifice sizes, and the specific gravities on which they can be used.

11-AV Maximum Operating Pressures				
Minimum Specific Gravity	0.75		0.50	
Float wt., oz (g)	2.90 (82) Standard		2.08 (59) Special	
Orifice Size (in)	Maximum Operating Pressure			
	psi		bar	
1/8	178	12	118	8
#38	267	18	177	12
5/64	400	28	311	21

22-AV Maximum Operating Pressure																							
Specific Gravity*	1.00		0.95		0.90		0.85		0.80		0.75		0.70		0.65		0.60		0.55		0.50		
Float wt., oz (g)	10.0 (282)		9.5 (268)		9.0 (254)		8.5 (240)		8.0 (226)		7.5 (212)		5.4 (152)		5.0 (141)		4.6 (130)		4.2 (119)		3.8 (109)		
Orifice Size (in)	Maximum Operating Pressure																						
	psi		bar		psi		bar		psi		bar		psi		bar		psi		bar		psi		bar
5/16	35	2.4	33	2.3	31	2.2	30	2.0	28	1.9	26	1.8	19	1.3	18	1.2	16	1.1	15	1.0	14	0.9	
1/4	57	3.9	54	3.7	51	3.5	49	3.4	46	3.2	43	3.0	31	2.1	29	2.0	27	1.8	24	1.7	22	1.5	
3/16	126	8.7	120	8.2	113	7.8	107	7.4	101	7.0	95	6.5	68	4.7	64	4.4	59	4.1	54	3.7	49	3.4	
5/32	217	14.9	206	14.2	195	13.5	185	12.7	174	12.0	163	11.2	118	8.1	110	7.6	101	7.0	93	6.4	85	5.8	
1/8	371	25.6	352	24.3	334	23.0	316	21.8	297	20.5	279	19.2	202	13.9	187	12.9	173	12.0	159	11.0	145	10.0	
7/64	474	32.7	451	31.1	427	29.5	404	27.9	380	26.2	357	24.6	258	17.8	240	16.5	222	15.3	204	14.0	186	12.8	
#38	590	40.7	561	38.7	532	36.7	503	34.7	473	32.7	444	30.6	321	22.1	298	20.6	276	19.0	253	17.5	231	15.9	
5/64	600	41.4	600	41.4	600	41.4	600	41.4	600	41.4	600	41.4	473	32.6	440	30.3	407	28.1	374	25.8	341	23.5	

13-AV Maximum Operating Pressures																			
Specific Gravity*	1.00		0.95		0.90		0.85		0.80		0.75		0.70		0.65		0.60		
Float wt., oz (g)	14.9 (423)		14.2 (402)		13.4 (381)		12.7 (360)		12.0 (339)		11.2 (318)		10.5 (296)		9.7 (275)		9.0 (254)		
Orifice Size (in)	Maximum Operating Pressure																		
	psi		bar		psi		bar		psi		bar		psi		bar		psi		bar
1/2	21	1.5	20	1.4	19	1.3	18	1.3	17	1.2	16	1.1	15	1.0	14	1.0	13	0.9	
3/8	45	3.1	43	3.0	41	2.8	38	2.7	36	2.5	34	2.3	32	2.2	30	2.0	27	1.9	
5/16	72	5.0	69	4.7	65	4.5	61	4.2	58	4.0	54	3.8	51	3.5	47	3.3	44	3.0	
9/32	96	6.6	91	6.3	87	6.0	82	5.6	77	5.3	72	5.0	68	4.7	63	4.3	58	4.0	
1/4	144	9.9	137	9.4	130	8.9	123	8.5	116	8.0	109	7.5	102	7.0	94	6.5	87	6.0	
7/32	206	14	196	13	186	13	176	12	165	11	155	10.7	145	10.0	135	9.3	125	8.6	
3/16	309	21	294	20	279	19	264	18	249	17	234	16	218	15	203	14	188	13	
5/32	484	33	460	32	437	30	413	28	389	27	365	25	342	24	318	22	294	20	
1/8	570	39	570	39	570	39	570	39	570	39	570	39	570	39	570	39	570	39	
7/64	570	39	570	39	570	39	570	39	570	39	570	39	570	39	570	39	570	39	

\*If specific gravity falls between those shown, use next lowest: e.g., if actual gravity is 0.73, use 0.70 specific gravity data.

Air Vents